


INSTALLING THE ELKHEAD TOOLS HANDLE ON THE KNEW CONCEPTS FRETSAW

1. Using a “demolition” chisel (not Blue Spruce or Lie-Nielsen), remove existing stamped metal ferrule

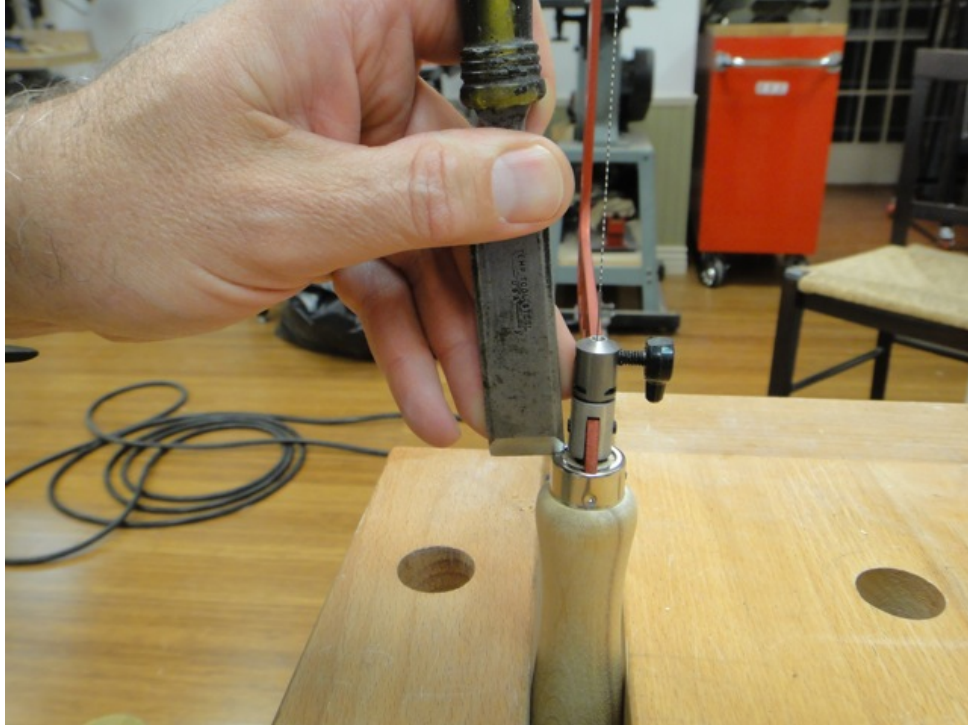

2. Drive pin out, remove old handle



3. Loosen frame attachment hardware, position new handle and tighten set screws
(Note: The Titanium saw frames have a slight variation in thickness. You may need to file the inside of the slot of the brass ferrule slightly to achieve proper fit.)



4. Tighten frame hardware, enjoy your new and improved saw!

